

AWNING AND WALLS SET-UP

We take you
through the
set-up procedure
for a roll out
awning and walls

WORDS BY PAUL HUTCHINSON
PHOTOGRAPHY BY TOMMY SALMON
AND PAUL HUTCHINSON

HOW TO ERECT AN AWNING AND WALLS



Over the years, I have seen many people struggle to set up a roll-out awning. As they have increased in popularity, many still struggle and even more have no idea how to erect the walls that go with their awning. Consequently, the walls never get used, and when they trade in their old vans, the walls are like new.

We thought it would be prudent to give you a step-by-step guide to rolling out your awning and setting up your walls, so that you may get many years of enjoyment from them.

There are many brands on the market, but the principle remains the same with almost all of them.


ROLL-OUT AWNING – DOMETIC OR SIMILAR



1



3

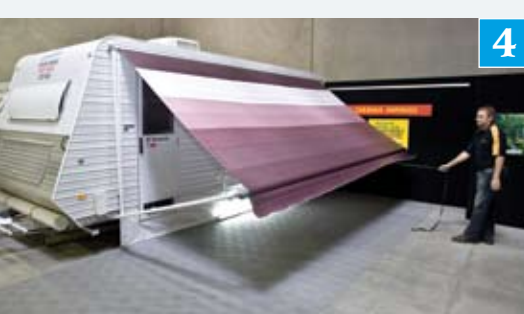

4



5

STEP 1 Undo the black knobs in the centre of the arm

STEP 2 Release travel catches

STEP 3 Switch ratchet to roll down

STEP 4 Pull on cord to roll down the awning all the way

STEP 5 Slide side support x2 up the arm, and lock into place

STEP 6 Lift first handle and arm to halfway (if two people, you can bypass this step)

STEP 7 Lift second handle and arm to required height

STEP 8 Lift first handle and arm to equal height of second handle

STEP 9 Tighten up the black knob while pulling down on the outer edge



10



11



13

TO CONVERT TO ANNEX

STEP 10 Ensure roller tube has hole for sidewall support at three o'clock position facing van, and long wall hanger at five o'clock

STEP 11 Remove pull-down rope from roller tube by sliding out one end

STEP 12 Insert long wall by sliding through this same track

STEP 13 Attach draught skirt

STEP 14 Insert velcro strip (2in wide) into sail track on van

STEP 15 Join sections together to create one end pole

STEP 16 Insert this pole into bracket on van, above velcro strip and attach other end into roller tube. Adjust size to fit and tighten

STEP 17 Insert middle support pole into bracket on van and attach other end into roller tube. Adjust size to fit and tighten

STEP 18 Insert end wall into this pole

STEP 19 Join corners of walls and attach velcro at van

STEP 20 Release arm supports at van and bring arm out to 90° upright


STEP 21 To unpack the annex, simply reverse the procedure



17



18

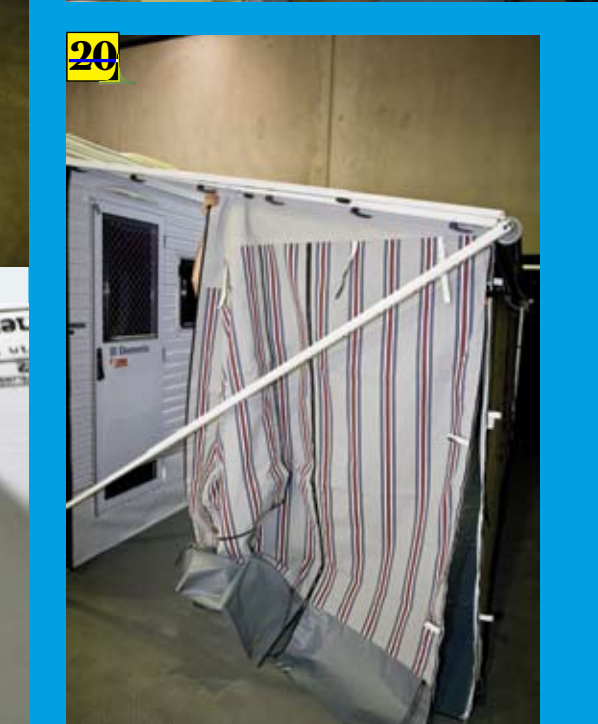


20



14



15

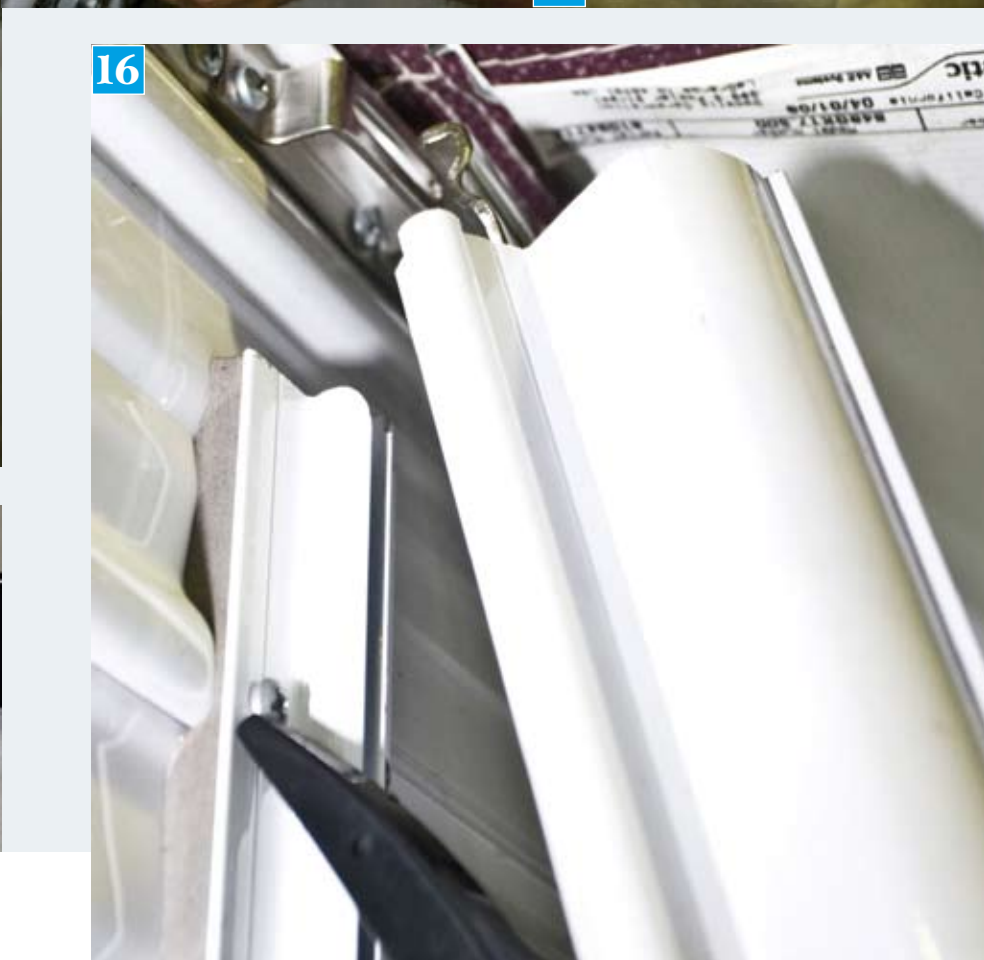

16



21 Annex walls now erected

HOW TO ERECT AN AWNING AND WALLS



A

ROLL-AWAY AWNING



Remove the annex first and place the arms back into their support on the van, then:

- A** Undo the black knobs
- B** Lower 1st handle and arm to half way
- C** Lower 2nd handle and arm to the van
- D** Lower 1st handle and arm to the van
- E** Release locking mechanism
- F** Slide side support x2 down the arm to the van
- G** Grab hold of the cord and slide toward the centre
- H** ~~Change~~ the ratchet to roll up (~~DO NOT LET GO OF THE CORD~~)
- I** Walk towards the van allowing the awning to roll up
- J** Lock awning supports
- K** Tighten up the black knobs



B



E



C

We hope that this simple step-by-step guide will be an invaluable tool for many years to come. Whenever you see someone struggling to put up their awning or annex, offer them this simple guide.

Remember this tip: if it's difficult to do, you're probably doing something wrong, so stop, step back, read the guide, and take the correct step.

Happy holidaying!

SPECIAL THANKS TO:

Peter & Louise Dale
Complete Caravan Awnings
Unit 2, 6 Robertson Pl
Penrith NSW 2750
Ph/Fax: (02) 4722 6886
Email: awnings2@bigpond.net.au
Website: completecaravanawnings.com



F



H



I



J



K